


# INFO share

## Airbag Connector Pull Test

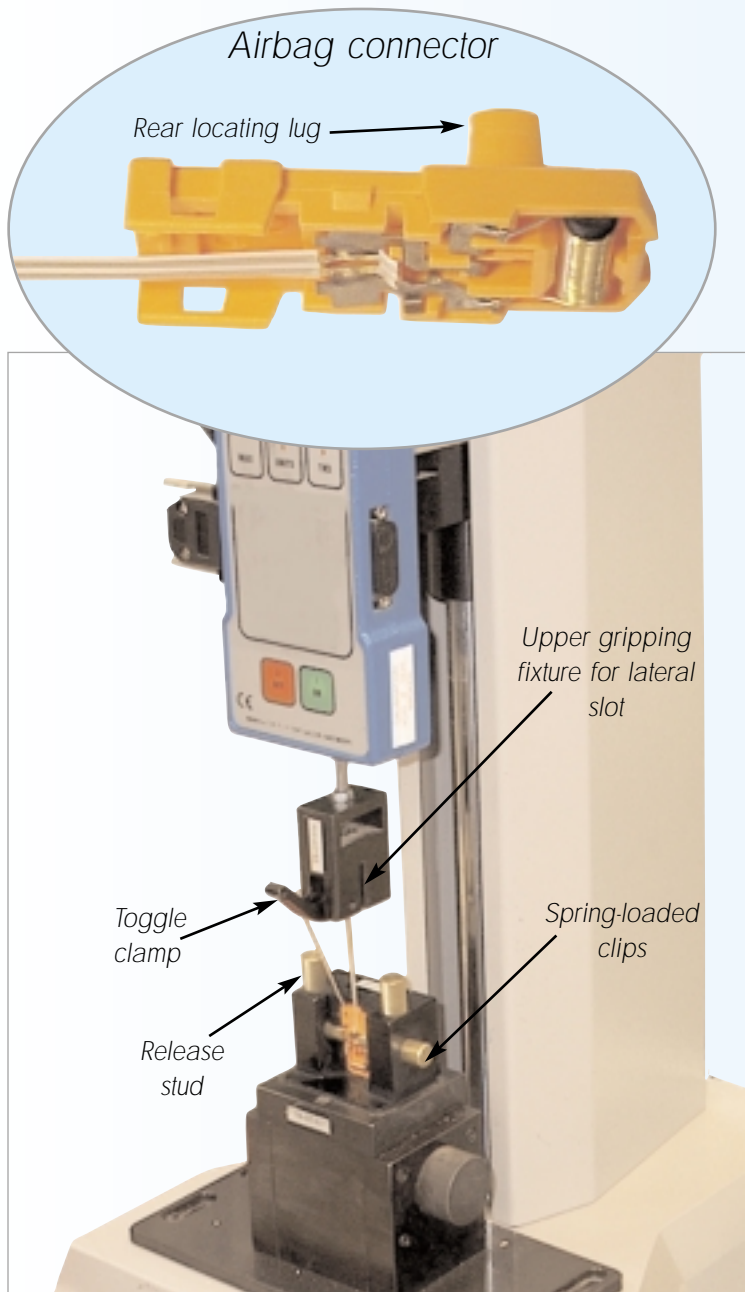

Airbag connector

Rear locating lug

Upper gripping fixture for lateral slot

Toggle clamp

Spring-loaded clips

Release stud

### System

UltraTest Motorised Test Stand  
200N PFI Digital Force Gauge

S.I. Instruments  
256 South Rd. Hilton  
South Australia 5033  
Ph (08) 8352 5511

### Supplied to

Tyco Electronics, Hungary

info@si-instruments.com  
www.si-instruments.com

### Specification

The customer required an easy-to-use system for production staff on the factory floor. Testing needed to be carried out in the minimum amount of time with very little training.

The test was required for the connector used in the deployment of car airbags. Rigorous batch testing was necessary as defects have serious implications for safety. The welded portion of the connector was pulled to destruction at a constant speed to ensure the best repeatability for results. Data needed to be easy to transmit to the company's SPC (Statistical Process Control) software on their network.

### Solution

A lower gripping fixture ensured that the operator could instantly fit the airbag connector. A rear locating lug on the connector was pushed into a recess in the fixture with the body of the connector held in place by spring-loaded clips.

The upper gripping fixture had a lateral slot into which the connector strip was placed. A toggle clamp at the front of the fixture allowed the operator to quickly secure the strip, ready for testing. The connector strip was pulled at 250mm/min until break. The maximum tension force was recorded on the PFI and then sent to the software.

The operator presses the release stud to open the spring-loaded clip at the end of the test, thereby allowing the connector to be quickly removed.

The simplicity of this system and the ability to perform rapid testing provided the customer with a complete testing solution.

**Mecmesin**  
FORCE & TORQUE TEST SOLUTIONS